

Director's Perch

The director's perch is designed to support no more than two people safely. To deploy the perch, first fold the mesh wings perpendicular to the platform and slide the aluminum slides in the stake pockets, then tighten the knob.

With one hand stabilizing the perch, rotate the locking latch a quarter turn and pull the platform toward you, allowing the mesh wings to rest on the ground.

Remove and stow the safety bar from across the door opening, then pivot the platform outside the trailer with a firm grasp on the mesh wings and one of the cables. Once the perch is deployed, put the safety bar back in place to discourage people from going out on the perch.

To stow the perch, firmly grasp the wings and carefully pivot the perch back in toward the interior of the trailer, allowing the mesh wings to rest on the floor. Place the safety bar across the door opening and secure it. Then, secure the locking latch to the perch. Loosen the knobs to pull the aluminum slides out of the stake pockets, then fold the mesh wings into the perch.

Maintenance:

- After each trip, check that the locking latch is still in place.
- Before the first trip each season, and periodically throughout the marching season, ensure that all nuts, bolts, and fasteners are snug, and support cables are not frayed.