## **Electric Side Stairs**

The electric side stairs are operated by the switch panel on the door. To lower the stairs for use, gently pull toward you on the marked stair step until it stops. Press and hold the stair "down" switch located on the control panel on the door. After the feet have touched the ground, hold the switch for an extra second to allow for trailer settling.

The stair handrail is held in place by a magnet when stowed. To deploy the handrail, grab the outer section near the bottom and pull up and out. The lower section will extend as the handrail unfolds.

\*Occasionally, the tractor may be set too high, and the feet will not touch the ground before reaching end-of-travel. raise the stairs back up, and adjust the trailer down, then lower the stairs.

To stow the stairs, press and hold the stair "up" switch on the control panel on the door. Once the stair has retracted all the way, gently push the stairs back into the trailer until it reaches the bump-stops. This ensures the door can close properly without bumping against the stairs.

To stow the handrail, push the extension piece in from the bottom until it reaches the end of its travel, then push the handrail gently against the door until the magnet secures it.

## **Maintenance:**

- Before your first trip of the season, inspect for any loose or missing fasteners.
- □ Ensure that the stairs are functioning smoothly and securely by opening and stowing them periodically throughout the season and during off-season.
- Check for loose pivot bolts.
- Check 3-D printed feet for excessive wear or damage.
  - New feet can be purchased through our online store.