

Manual Rear Stairs

The manual rear stairs are held in place by a latch on the wall of the trailer. To stow/raise the stairs for transport, carefully lift the stairs by the tread. Raise until the latch pin engages with the latch on the stair side plate.

To lower the stairs for use, engage the latch release handle on the side of the stair plate while securely holding the stairs. Carefully lower the stairs to the floor.

****Note:** Stairs should be stowed up for transit. Do not attempt to hang heavy items from the stairs while in the stowed position.

Maintenance:

- Before your first trip of the season, inspect for any loose or missing fasteners.
- Ensure that the stairs are functioning smoothly and securely by opening and stowing them periodically throughout the season and during off-season.
- Check for loose pivot bolts.
- Check 3-D printed feet for excessive wear or damage.
 - New feet can be purchased through our online store.